




PANEL MOULDINGS

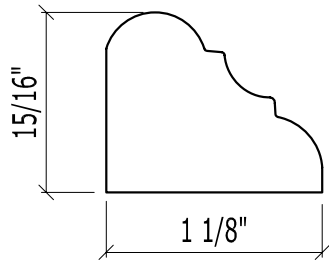


PM 001

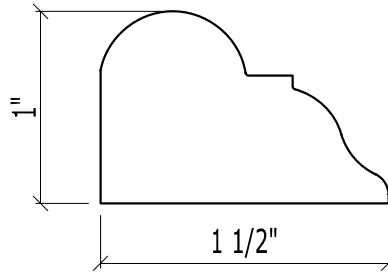


PM 002

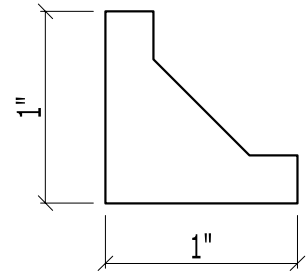


PM 003

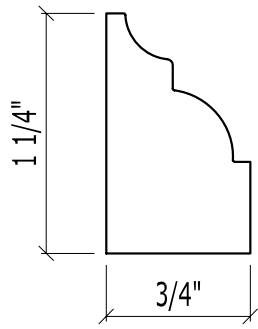


PM 004

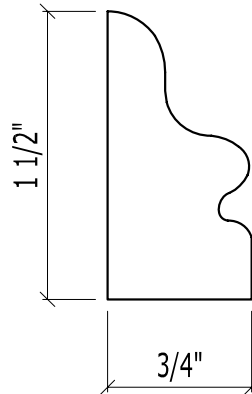


PM 005

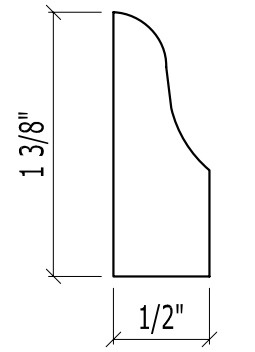


PM 006

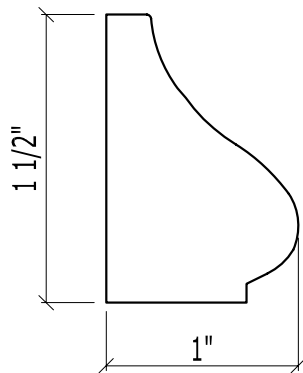

PM 007









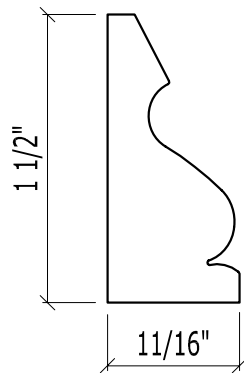


PM 008

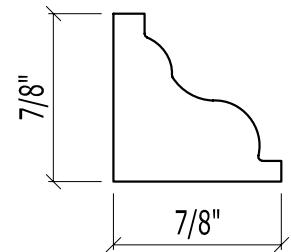


PM 009


PANEL MOULDINGS

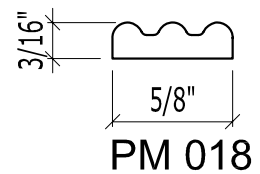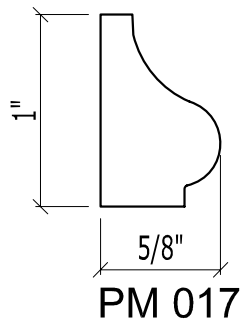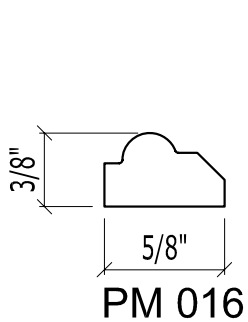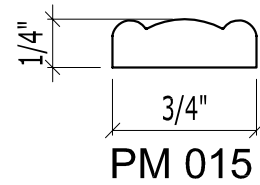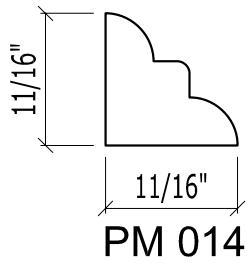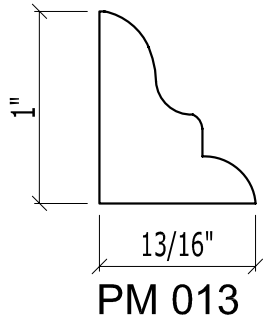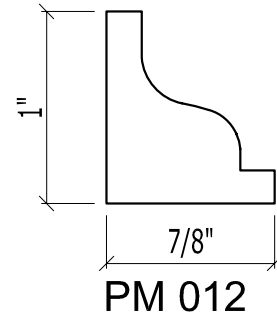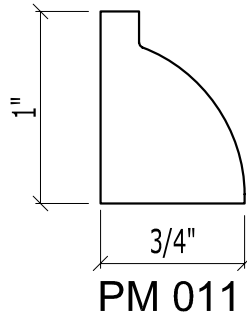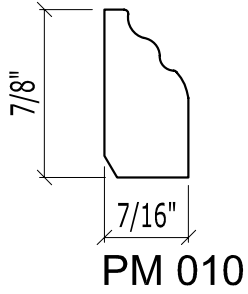


PANEL MOULDINGS

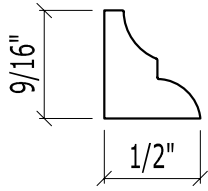


PM 019

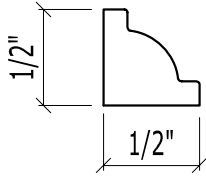


PM 020

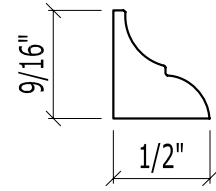


PM 021

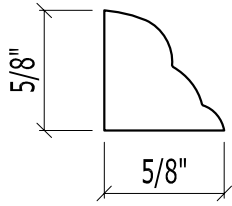


PM 022

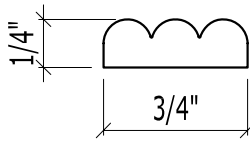


PM 023

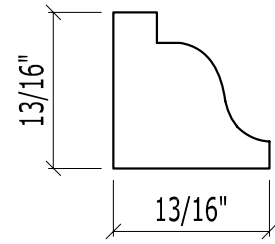


PM 024

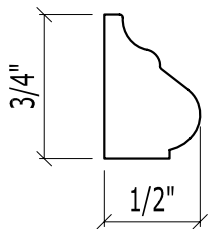

PM 025

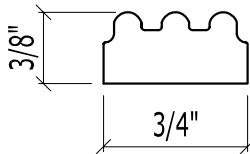


PM 026

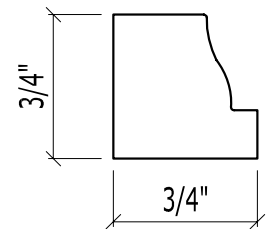


PM 027


PANEL MOULDINGS

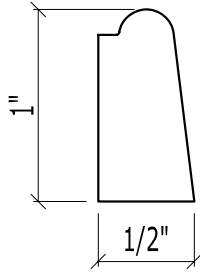


PM 028

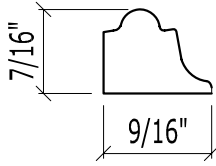


PM 029

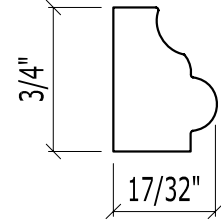


PM 030

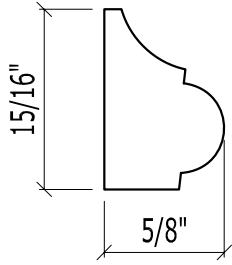


PM 031

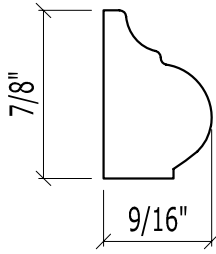


PM 032

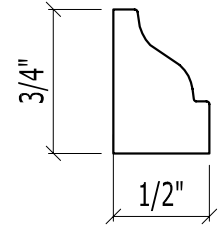


PM 033

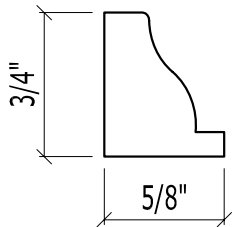

PM 034









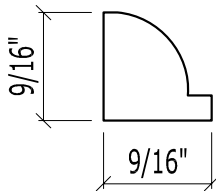


PM 035

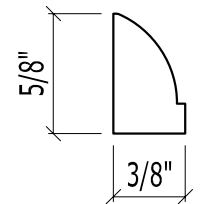


PM 036


PANEL MOULDINGS

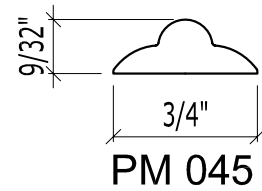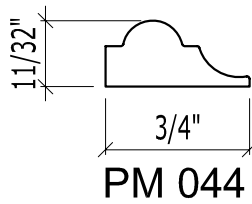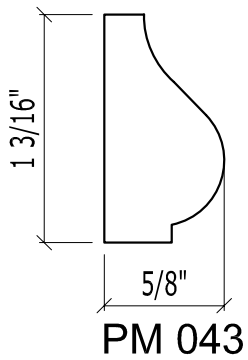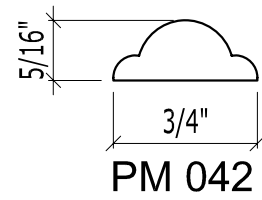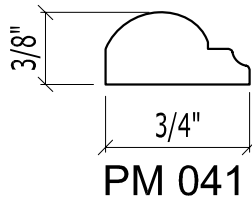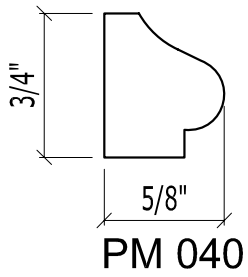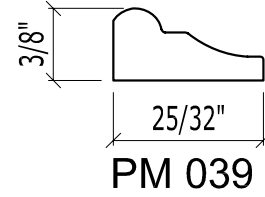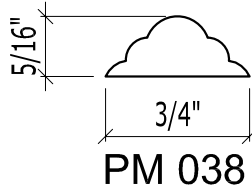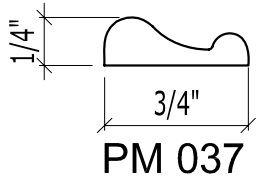


PANEL MOULDINGS

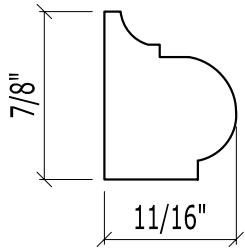


PM 046

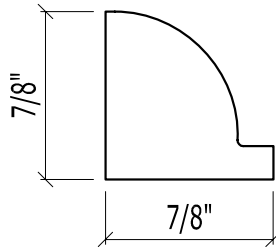


PM 047

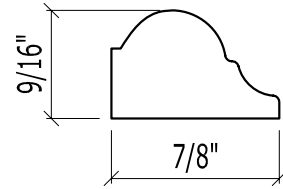


PM 048

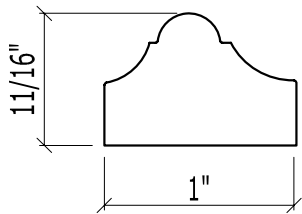


PM 049

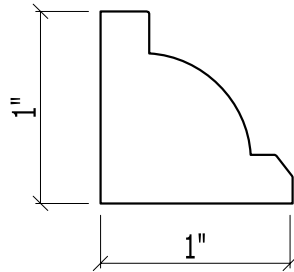


PM 050

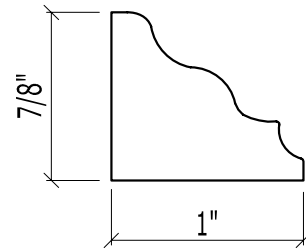


PM 051

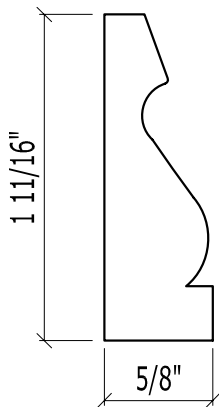

PM 052









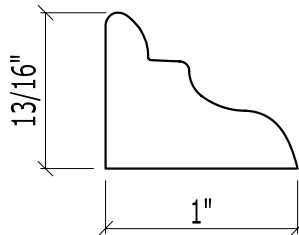


PM 053

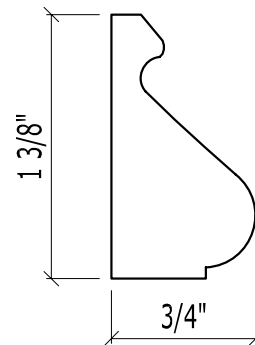


PM 054


PANEL MOULDINGS

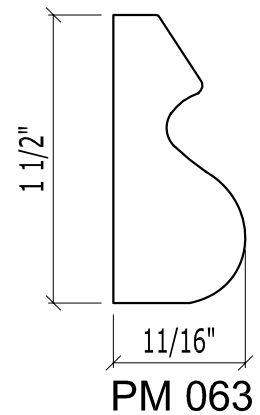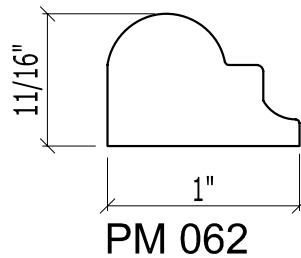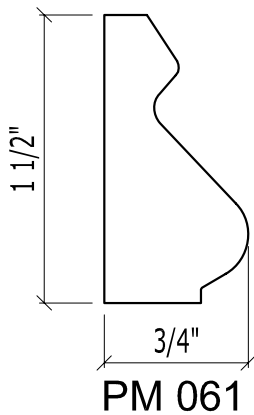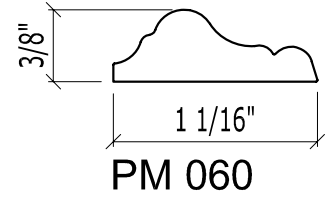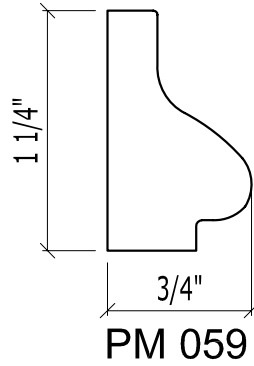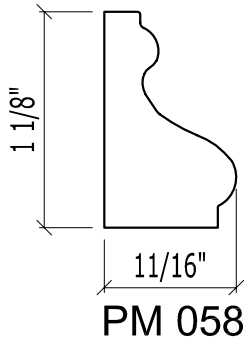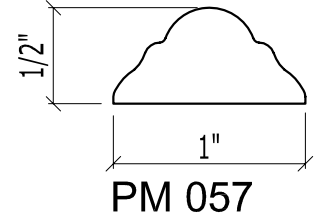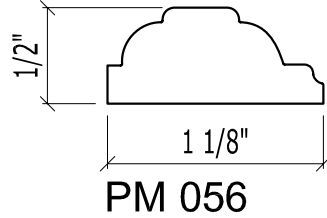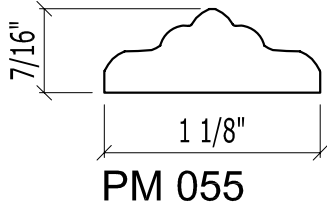


PANEL MOULDINGS

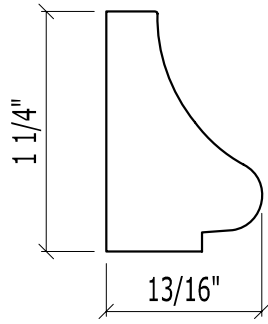


PM 064

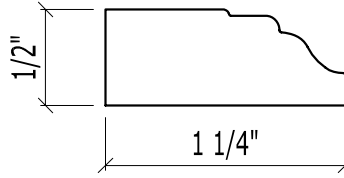


PM 065

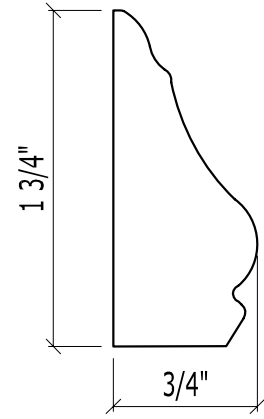


PM 066

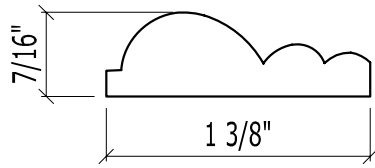


PM 067

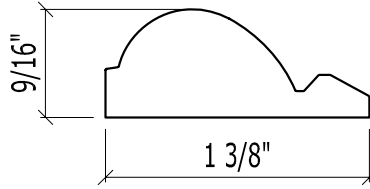


PM 068

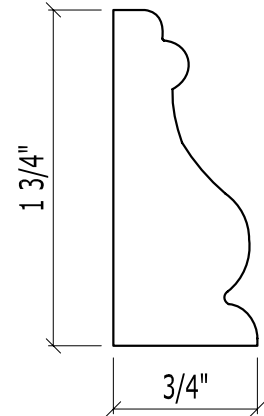


PM 069

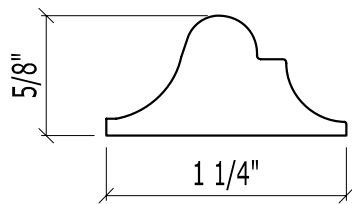

PM 070

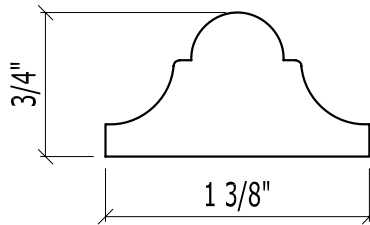


PM 071

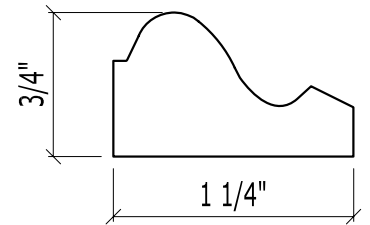


PM 072


PANEL MOULDINGS

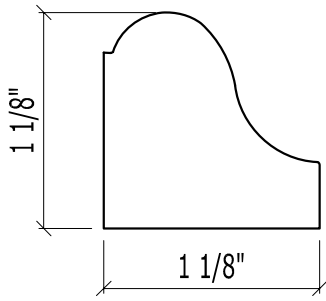


PM 073

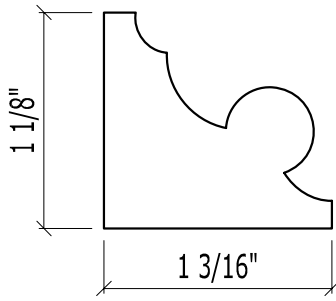


PM 074

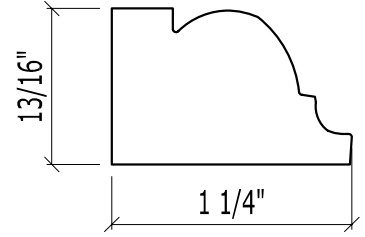


PM 075

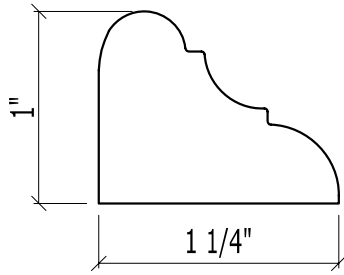


PM 076

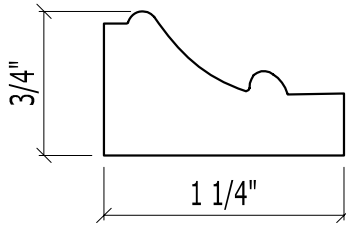


PM 077

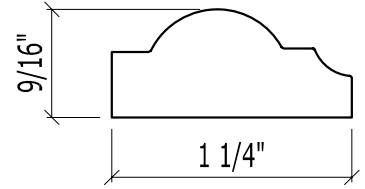


PM 078

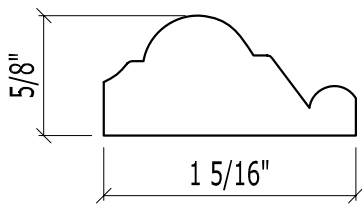

PM 079

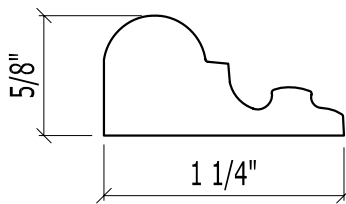


PM 080

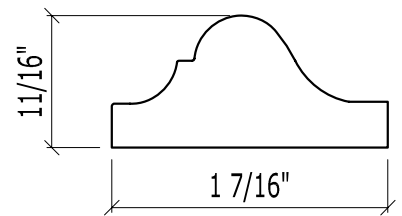


PM 081


PANEL MOULDINGS

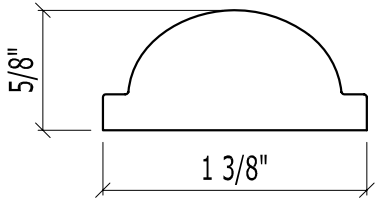


PM 082

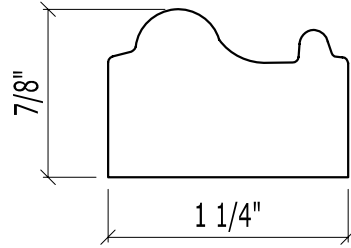


PM 083

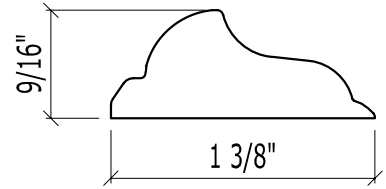


PM 084

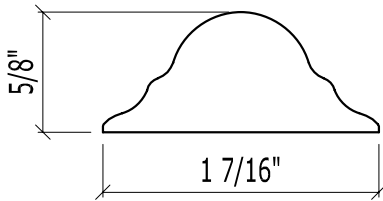


PM 085

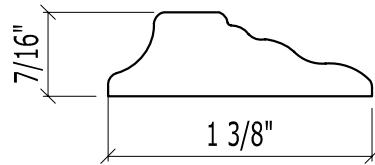


PM 086

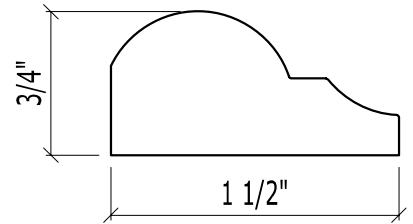


PM 087

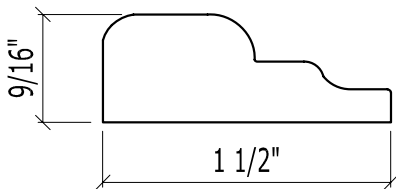

PM 088

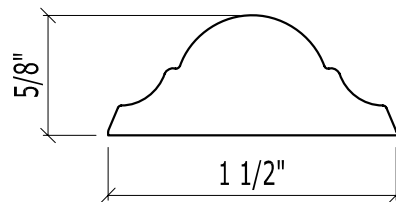


PM 089

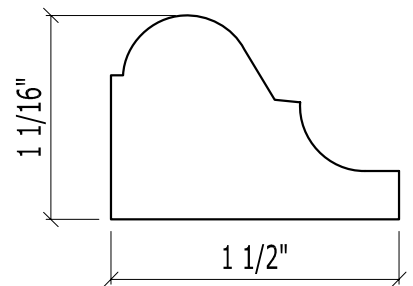


PM 090


PANEL MOULDINGS

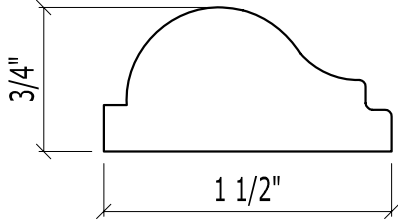


PM 091

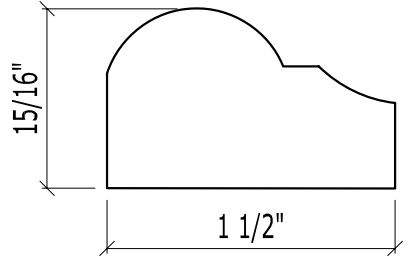


PM 092

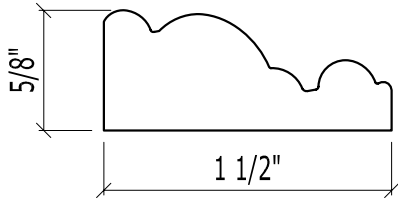


PM 093

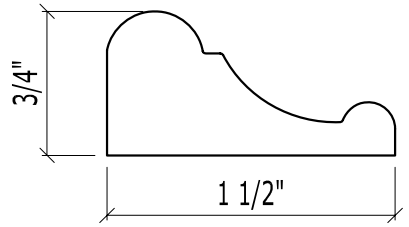

PM 094

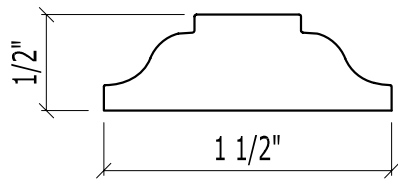


PM 095

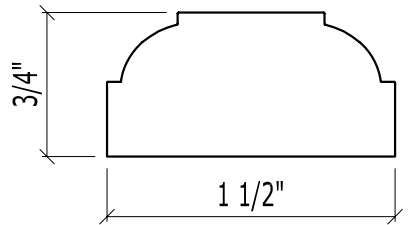


PM 096


PANEL MOULDINGS

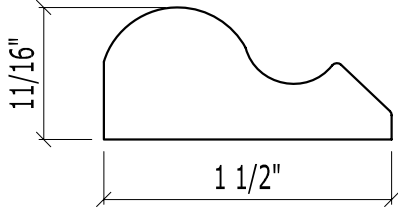


PM 097

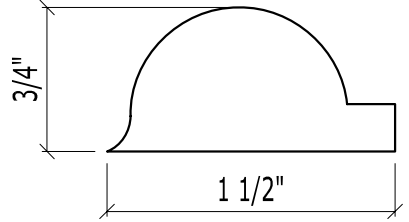


PM 098

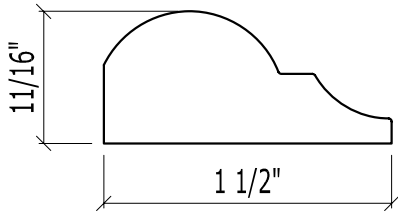


PM 099

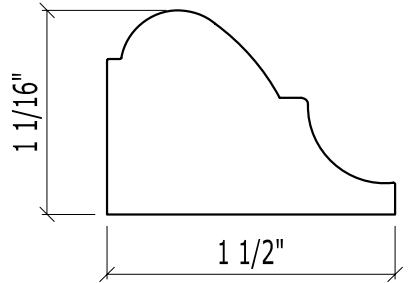

PM 100

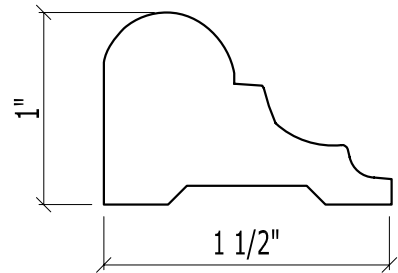


PM 101

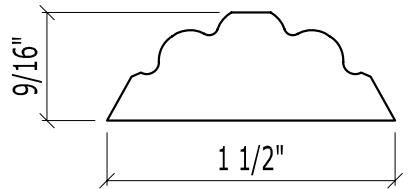


PM 102


PANEL MOULDINGS

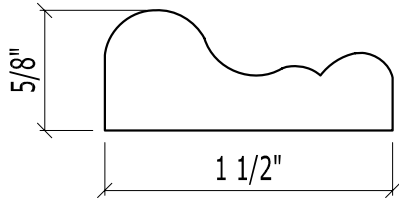


PM 103

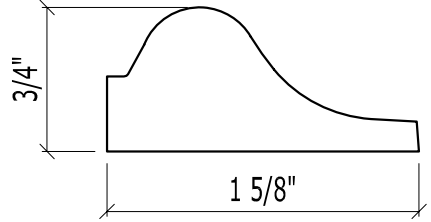


PM 104

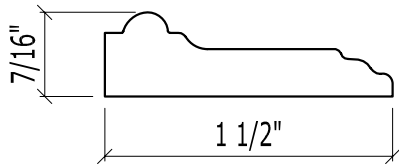


PM 105

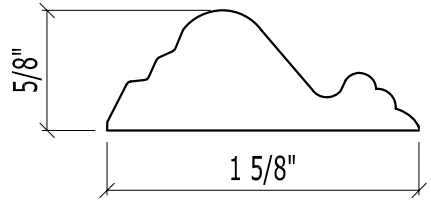

PM 106

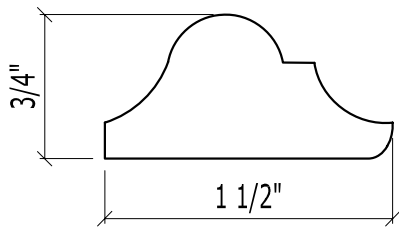


PM 107

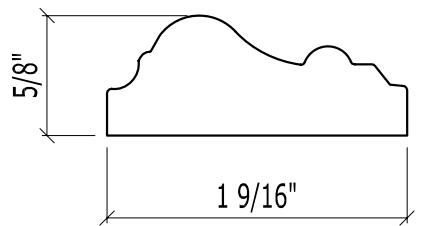


PM 108


PANEL MOULDINGS

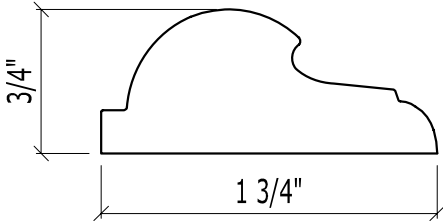


PM 109

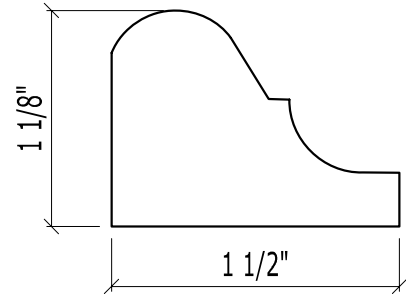


PM 110

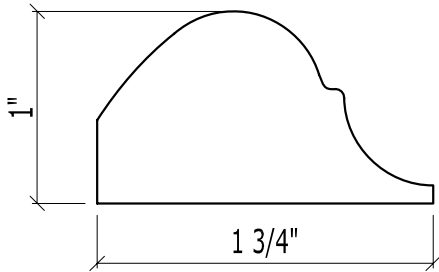


PM 111

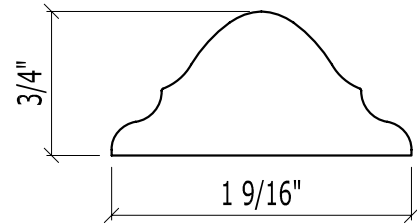

PM 112

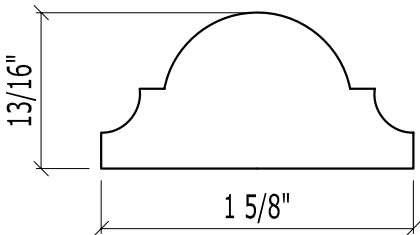


PM 113

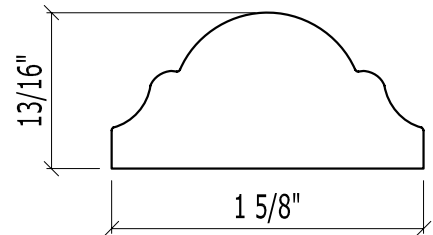


PM 114


PANEL MOULDINGS

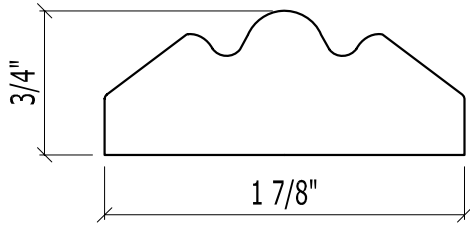


PM 115

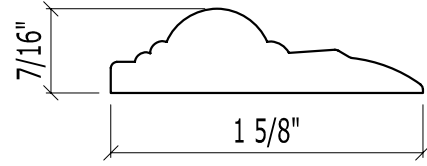


PM 116

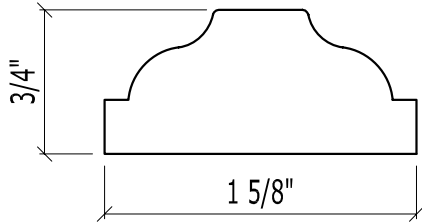


PM 117

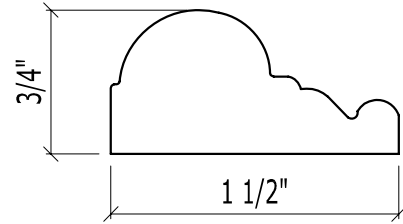


PM 118

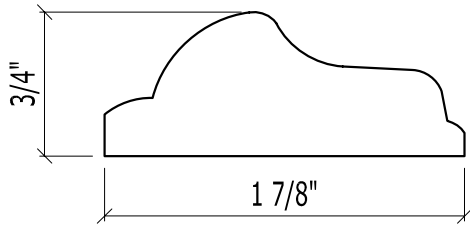


PM 119

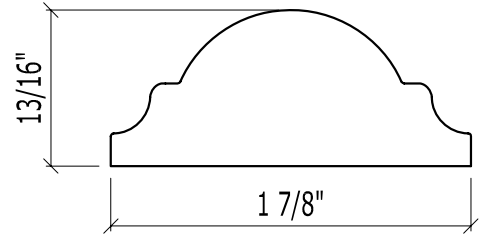

PM 120

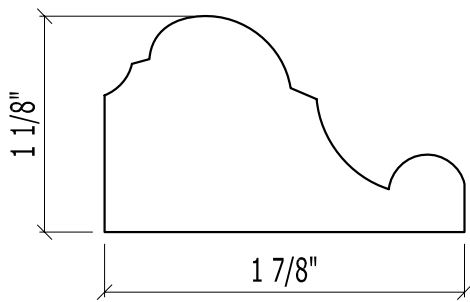


PM 121

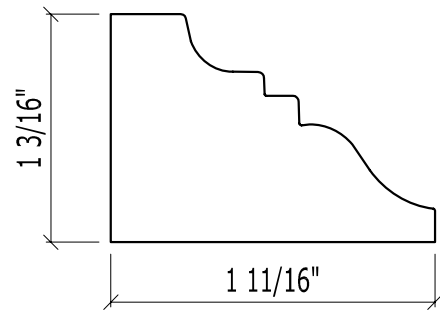


PM 122


PANEL MOULDINGS

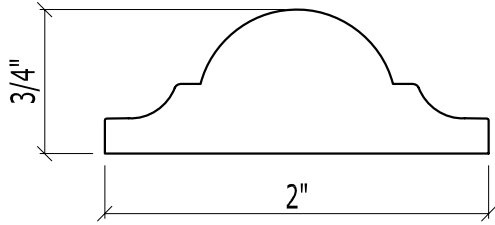


PM 123

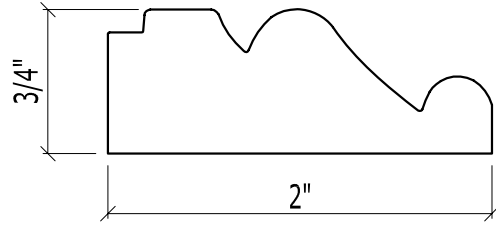


PM 124

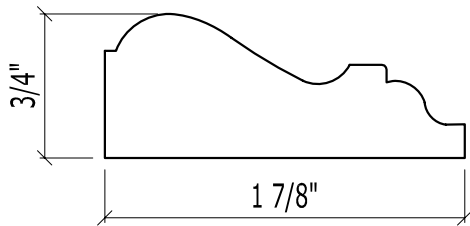


PM 125

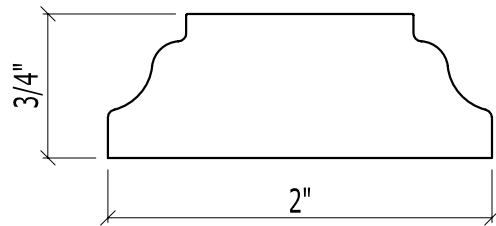

PM 126

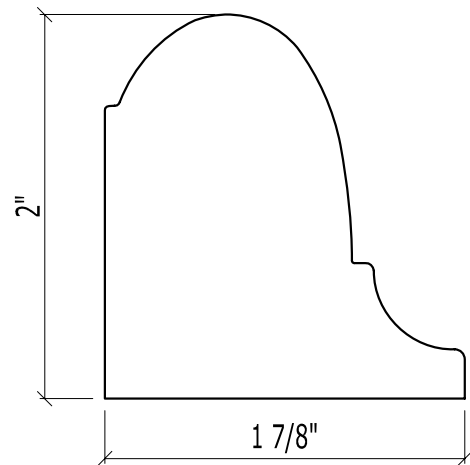


PM 127

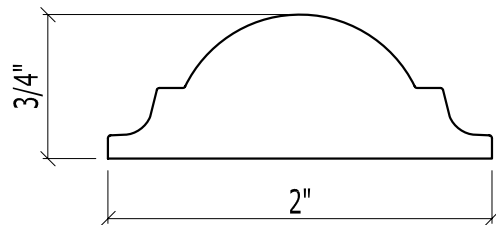


PM 128


PANEL MOULDINGS

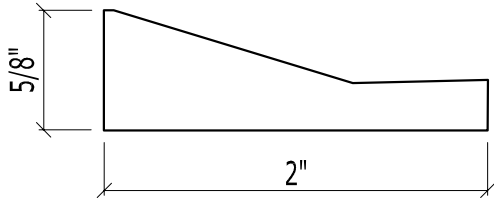


PM 129

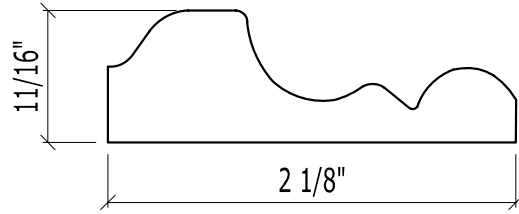


PM 130

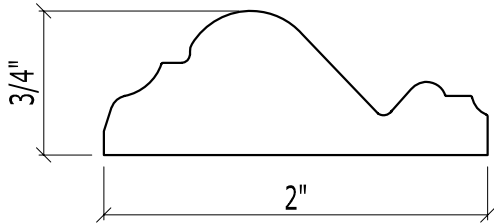


PM 131

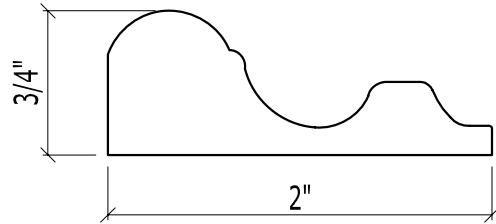


PM 132

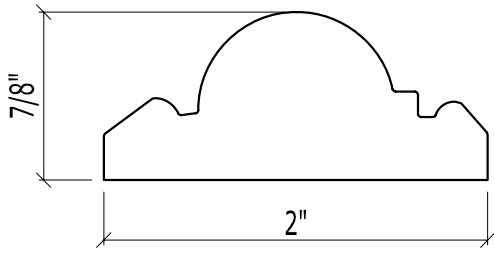


PM 133

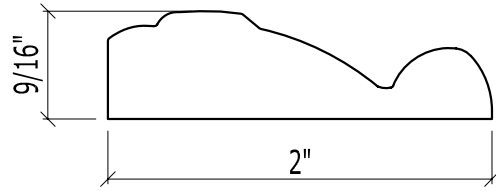

PM 134








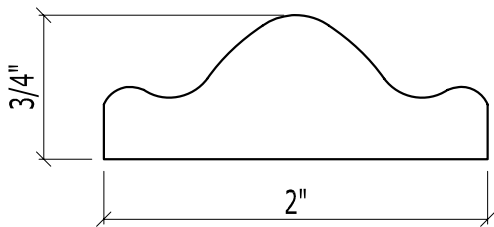


PM 135

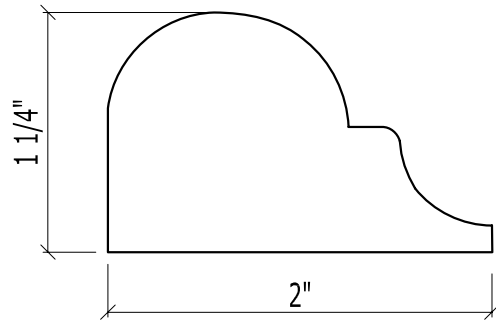


PM 136


PANEL MOULDINGS

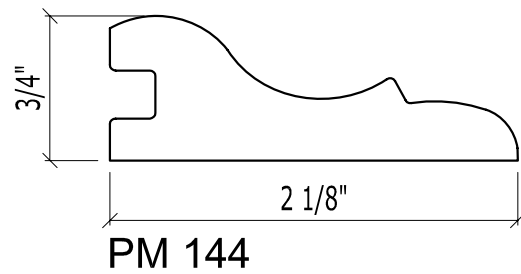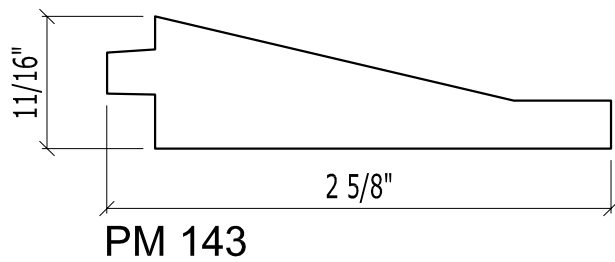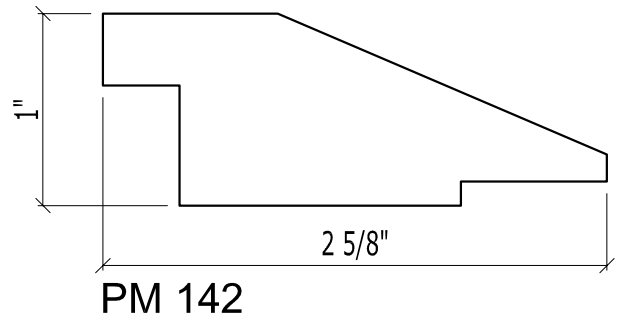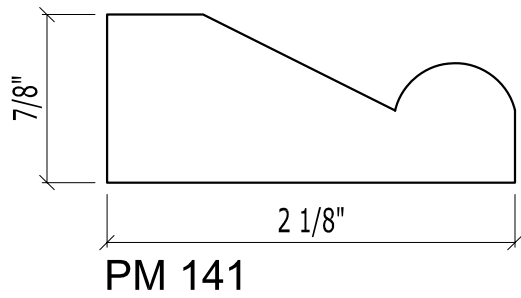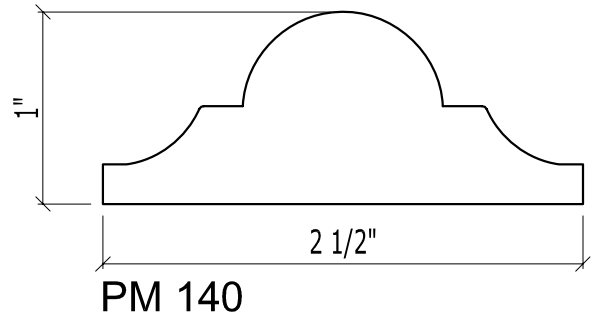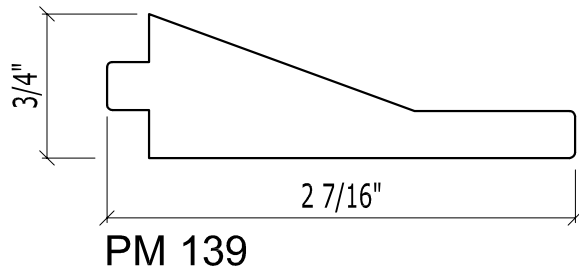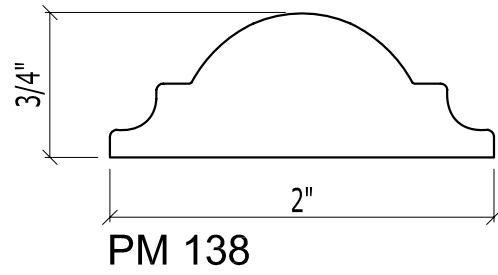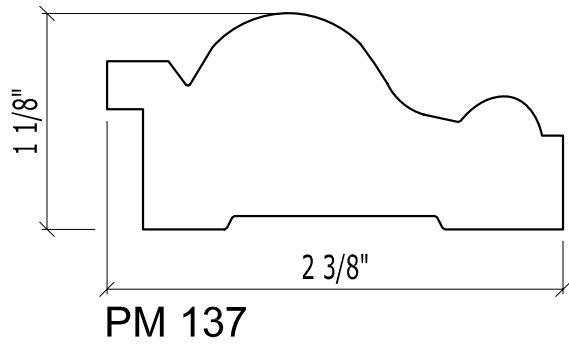


PANEL MOULDINGS

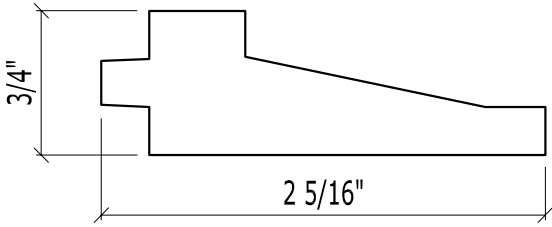


PM 145

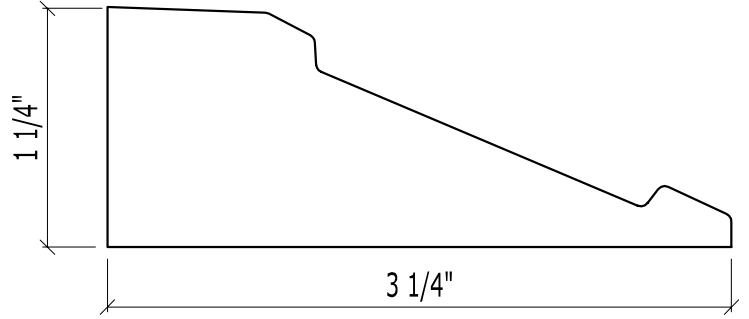


PM 146

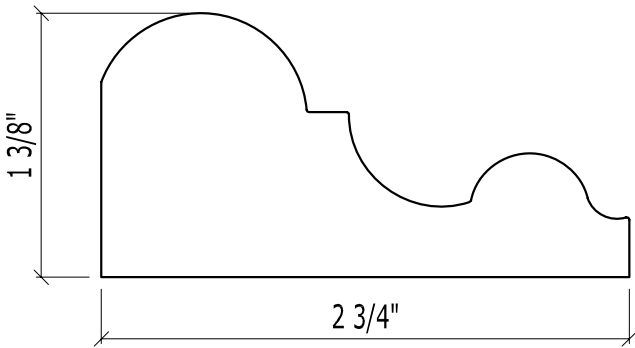


PM 147

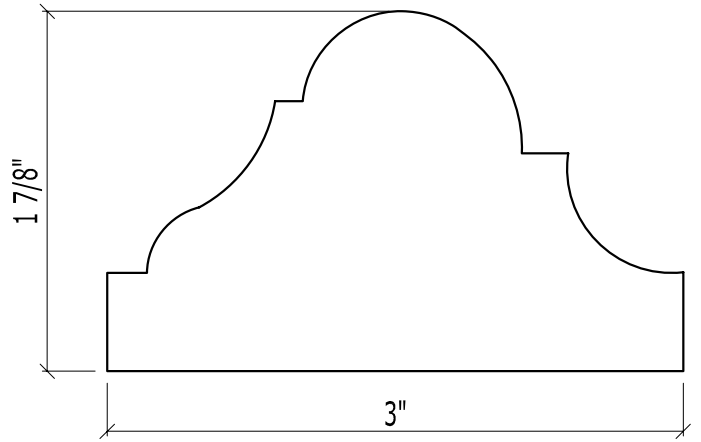

PM 148

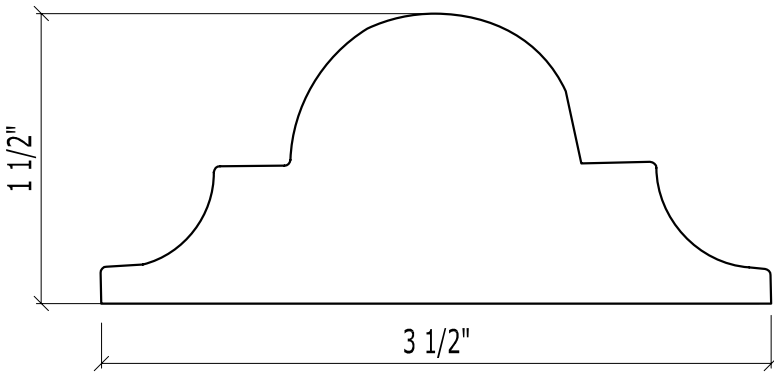


PM 149

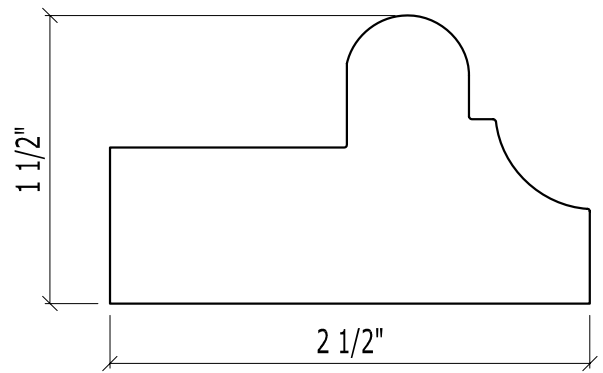


PM 150


PANEL MOULDINGS

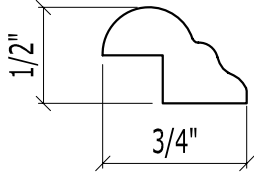


PM 151

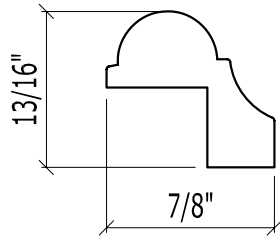


PM 152

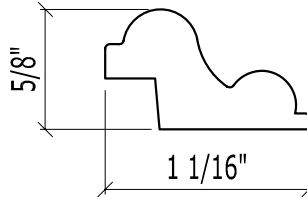


PM 153

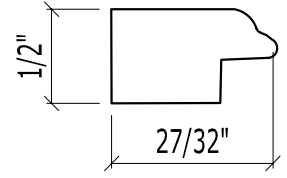


PM 154

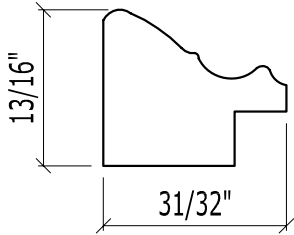


PM 155

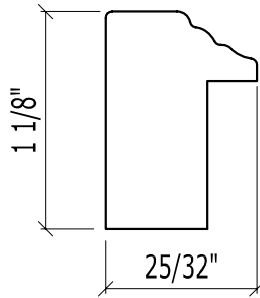


PM 156

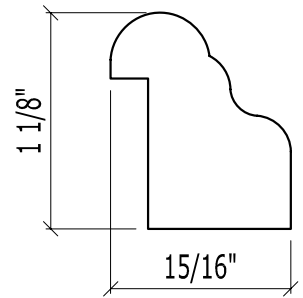


PM 157

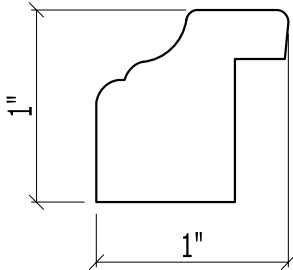


PM 158

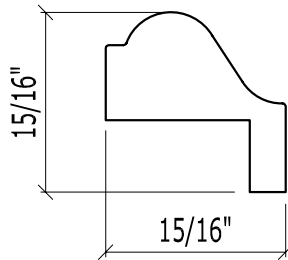


PM 159

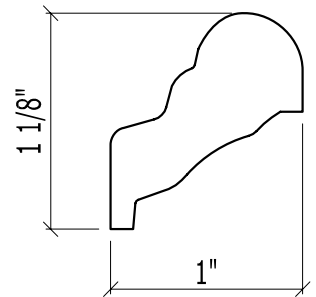


PM 160

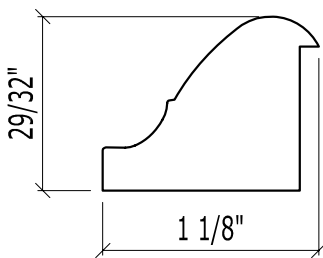

PM 161

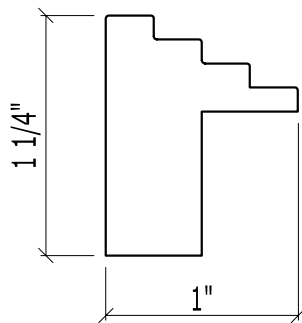


PM 162

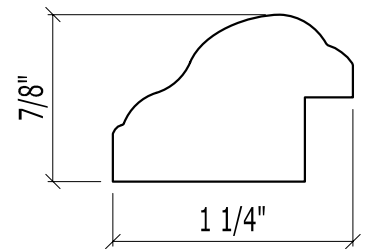


PM 163


PANEL MOULDINGS

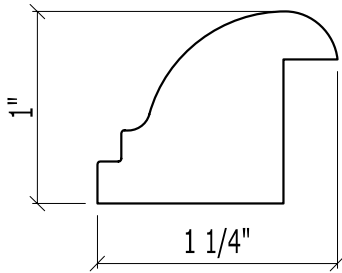


PM 164

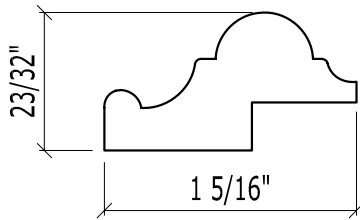


PM 165

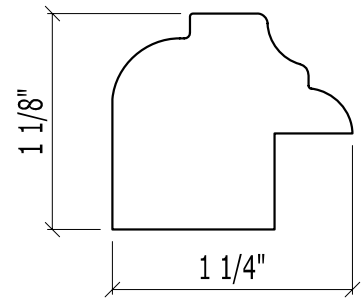


PM 166

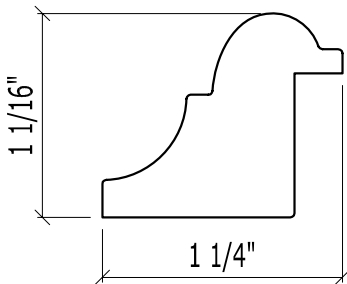


PM 167

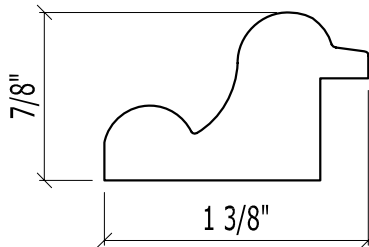


PM 168

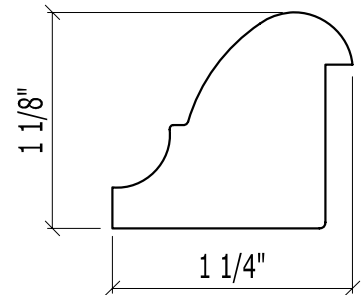


PM 169

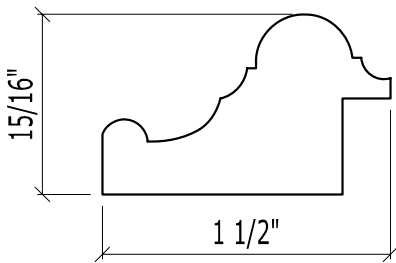


PM 170

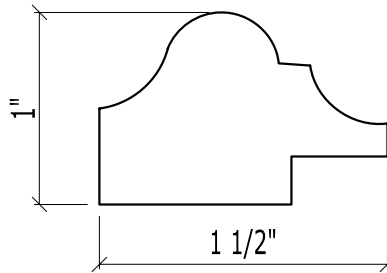


PM 171

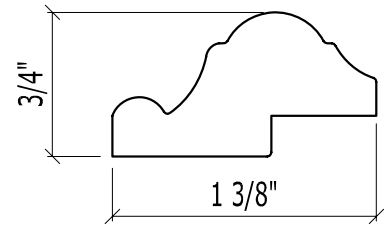


PM 172

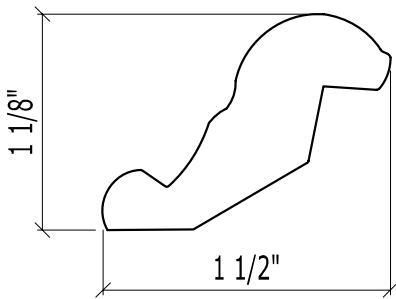

PM 173

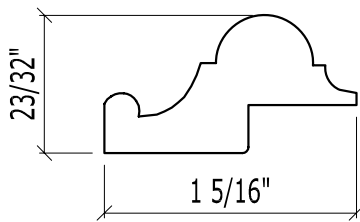


PM 174

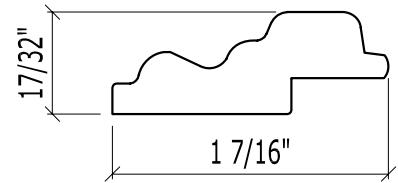


PM 175


PANEL MOULDINGS

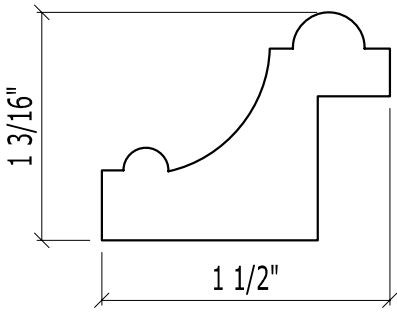


PM 176

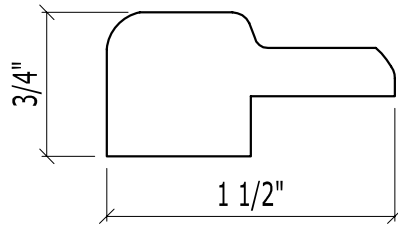


PM 177

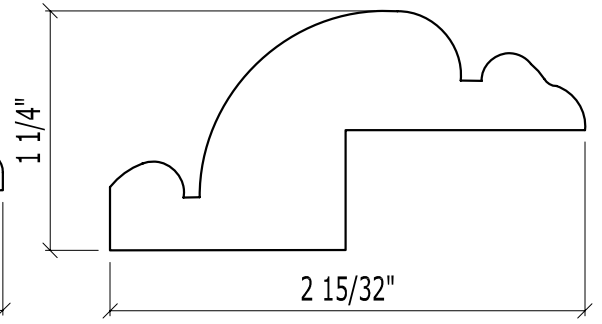


PM 178

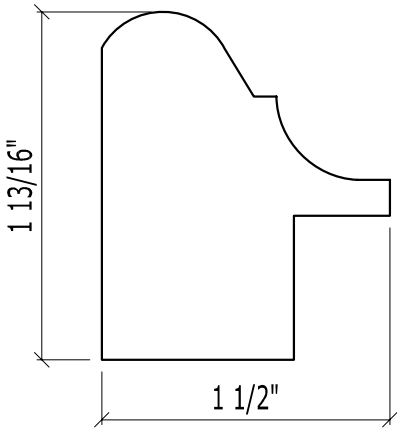


PM 179

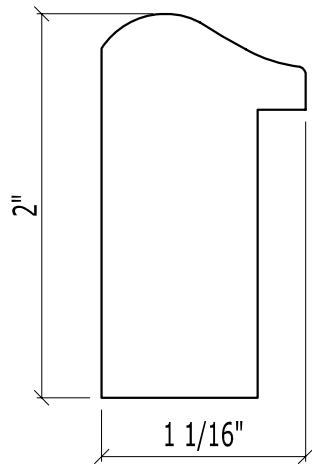


PM 180

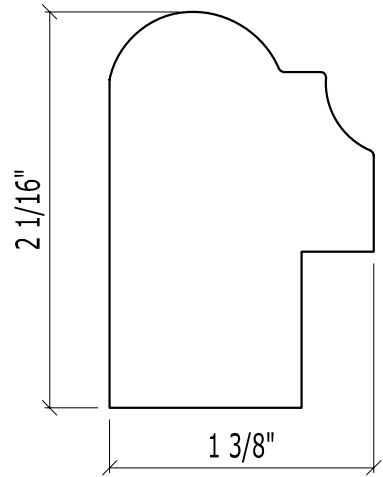


PM 181

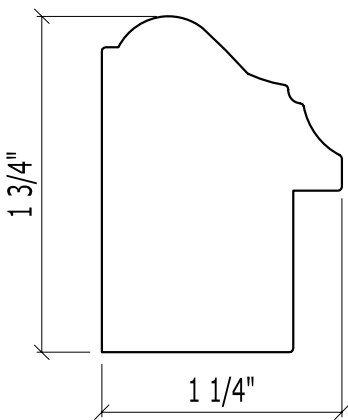

PM 182

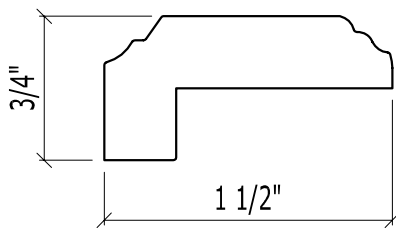


PM 183

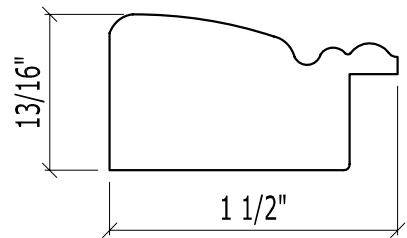


PM 184


PANEL MOULDINGS

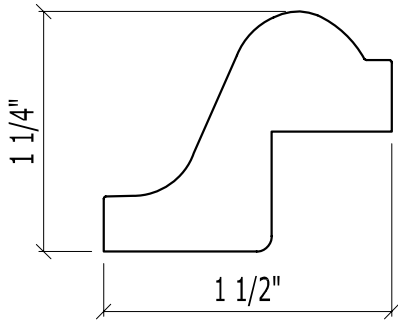


PM 185

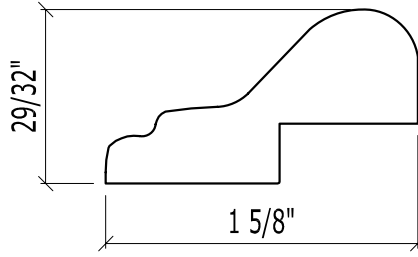


PM 186

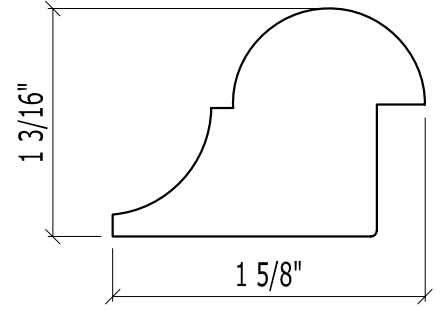


PM 187

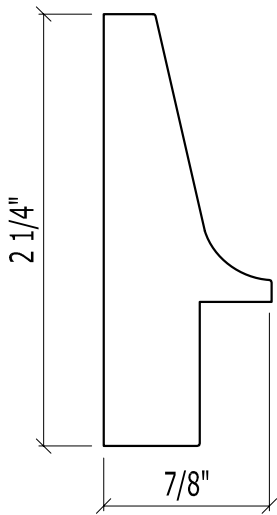


PM 188

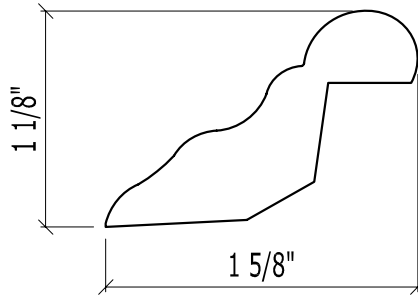


PM 189

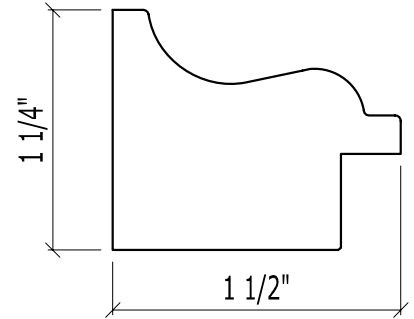


PM 190

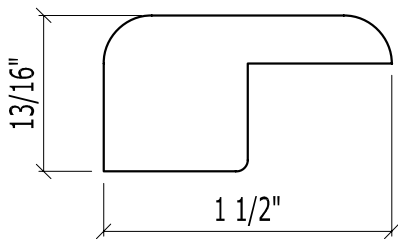

PM 191

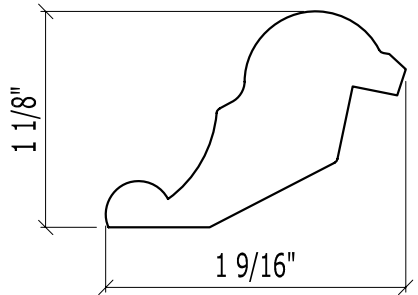


PM 192

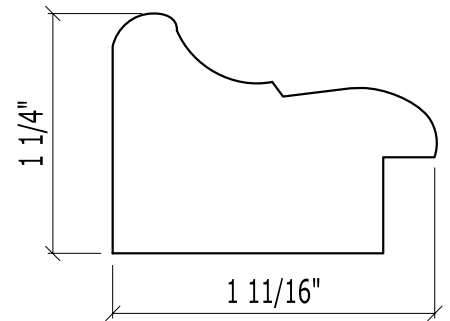


PM 193


PANEL MOULDINGS

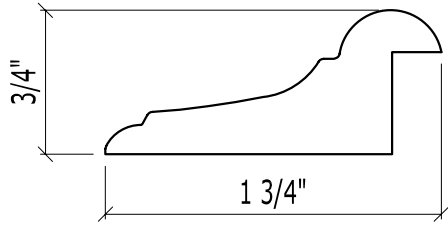


PM 194

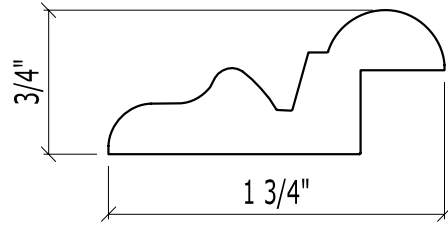


PM 195

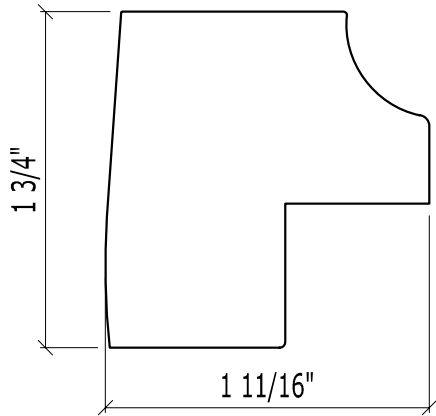


PM 196

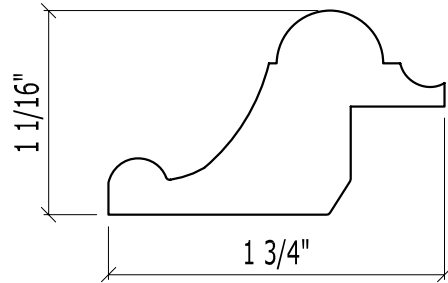

PM 197

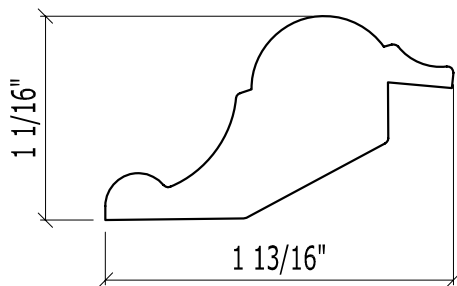


PM 198

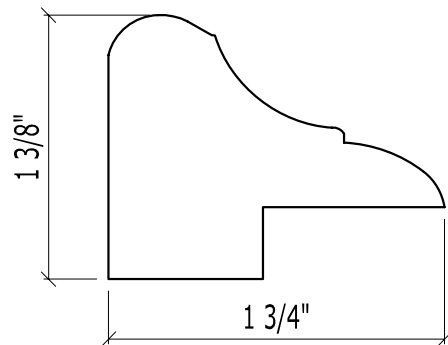


PM 199


PANEL MOULDINGS

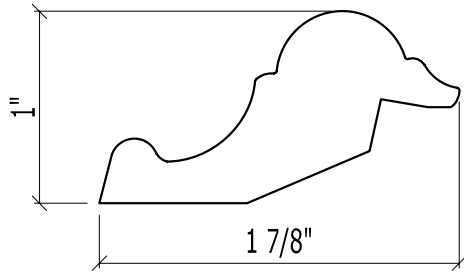


PM 200

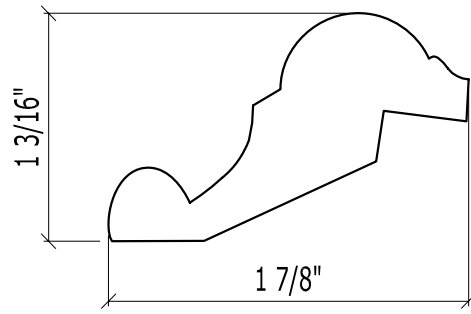


PM 201

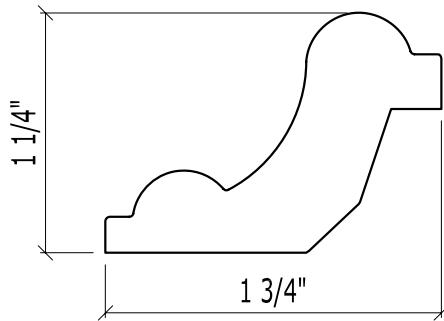


PM 202

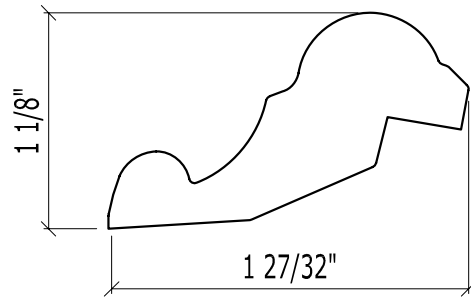

PM 203

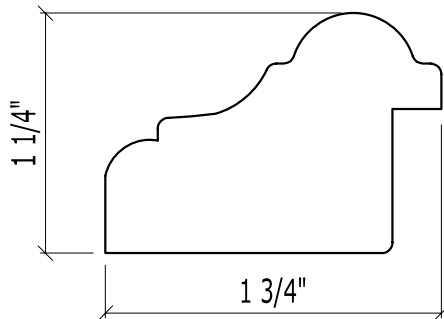


PM 204

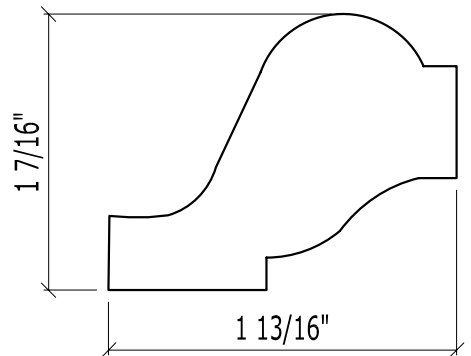


PM 205


PANEL MOULDINGS

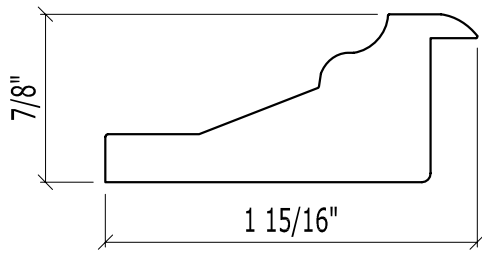


PM 206

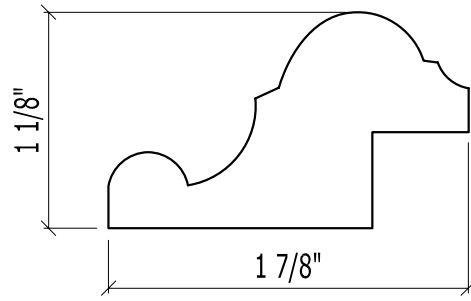


PM 207

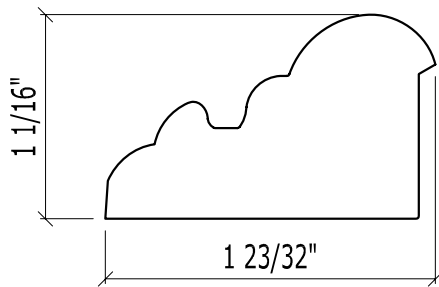


PM 208

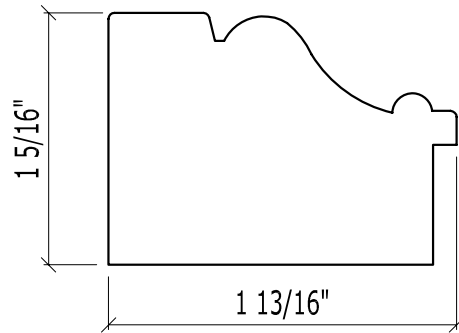

PM 209

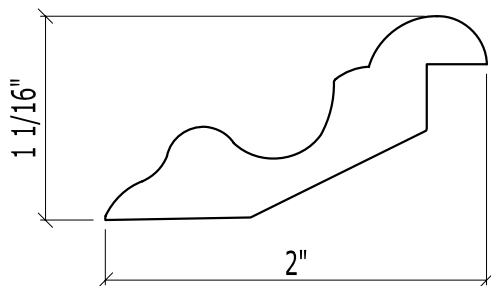


PM 210

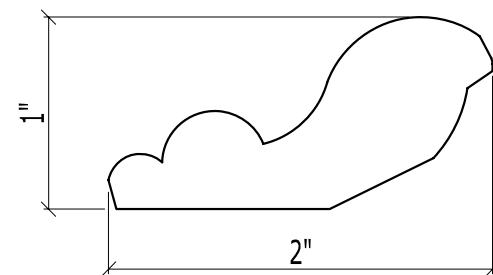


PM 211


PANEL MOULDINGS

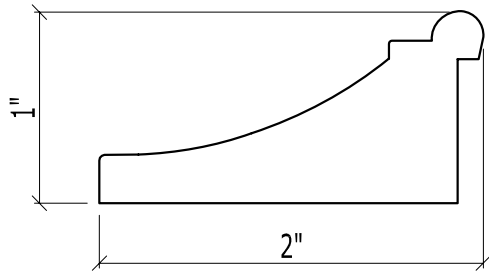


PM 212

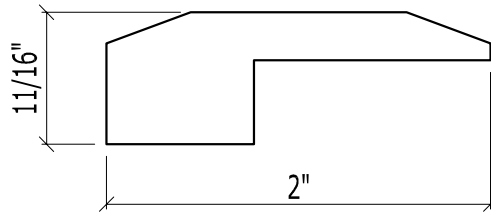

PM 213

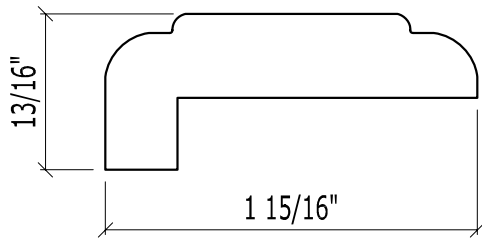


PM 214

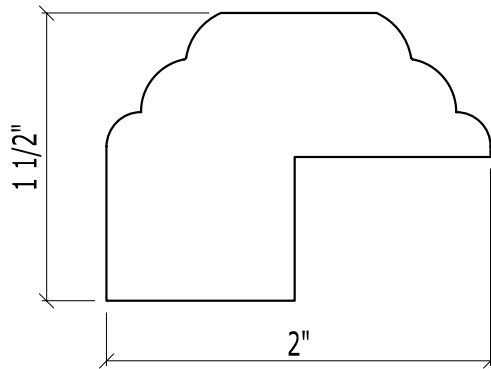

PM 215




PM 216

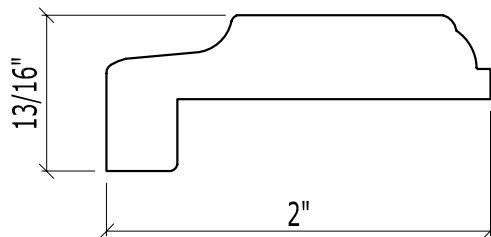


PM 217


PANEL MOULDINGS

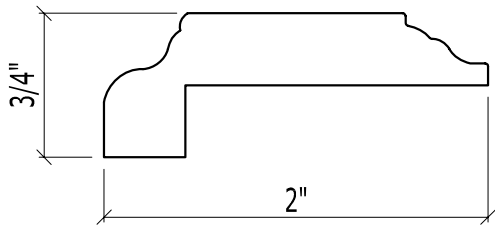


PM 218

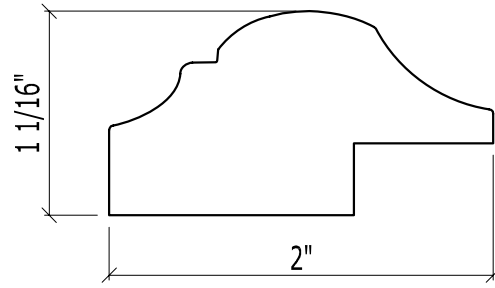


PM 219

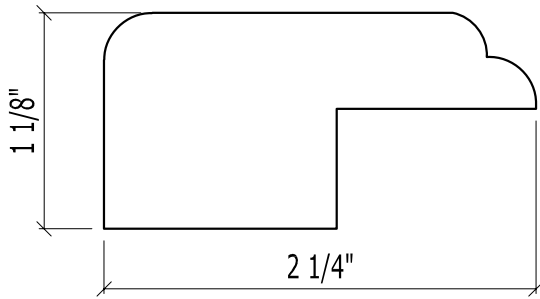


PM 220

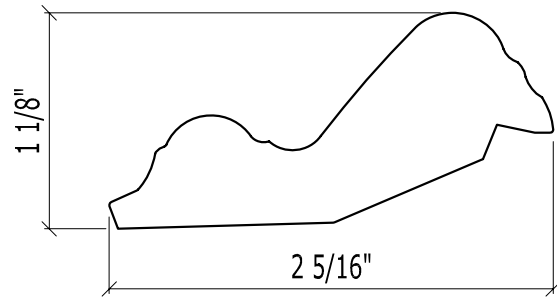

PM 221

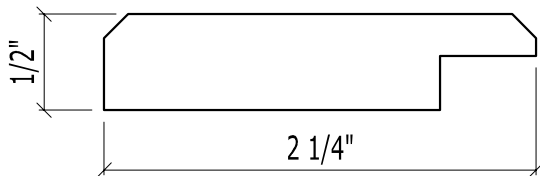


PM 222

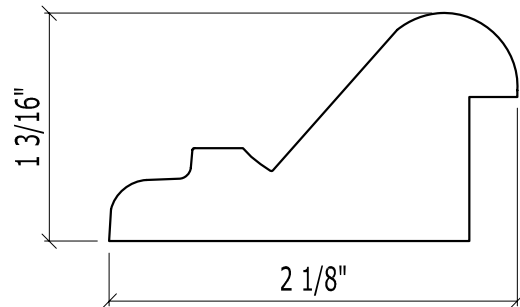


PM 223


PANEL MOULDINGS

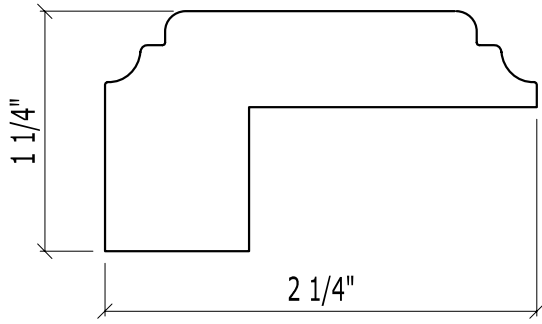


PM 224

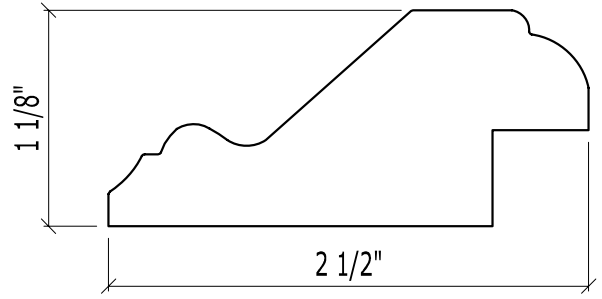


PM 225

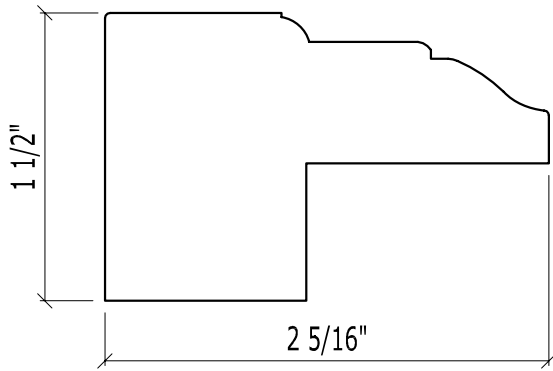


PM 226

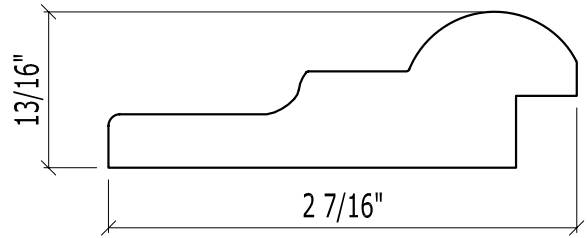

PM 227

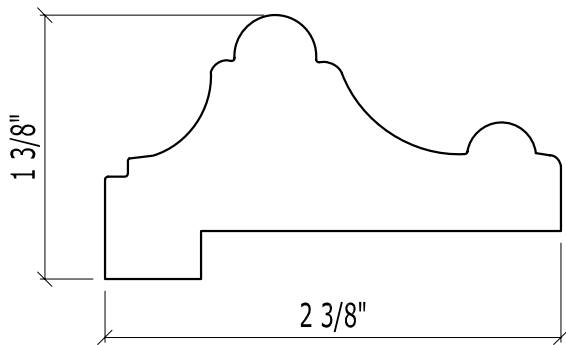


PM 228

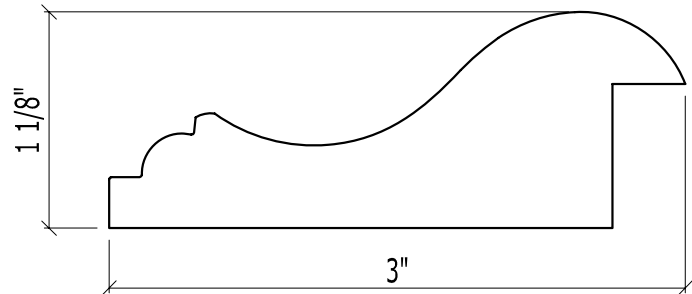


PM 229


PANEL MOULDINGS

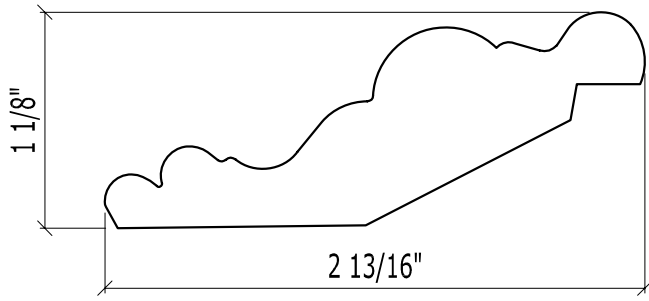


PM 230

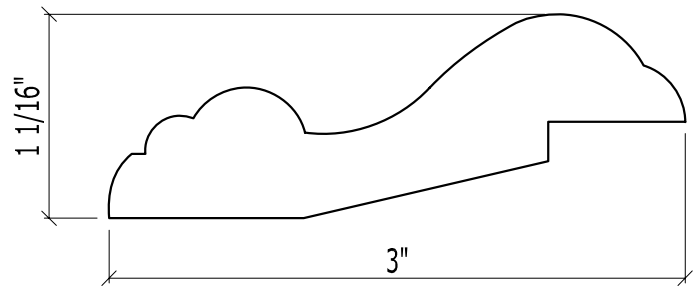

PM 231

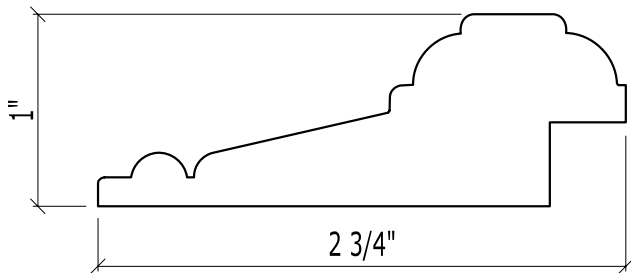


PM 232

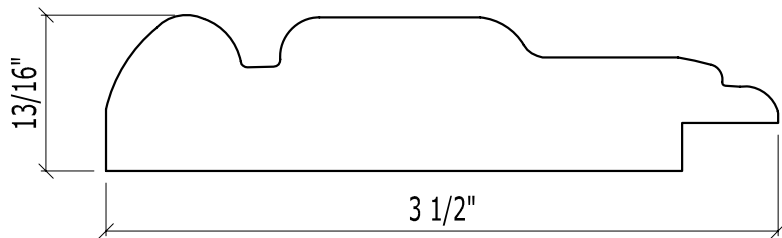


PM 233


PANEL MOULDINGS

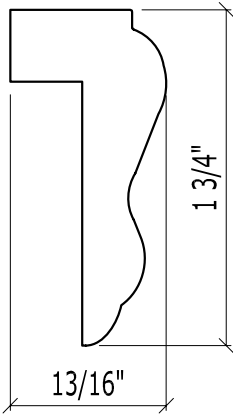


PM 234

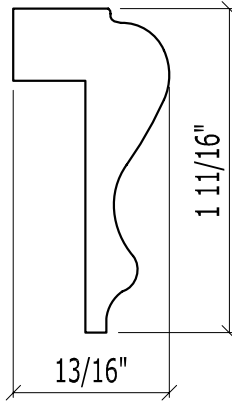


PM 235

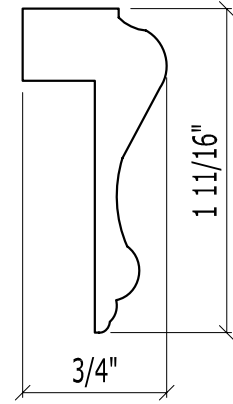


PM 236

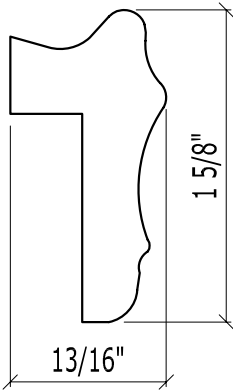


PM 237

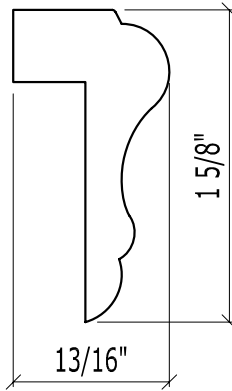


PM 238

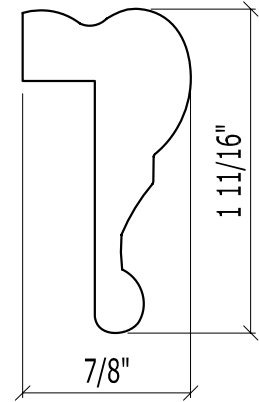


PM 239

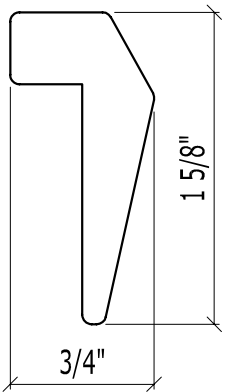

PM 240

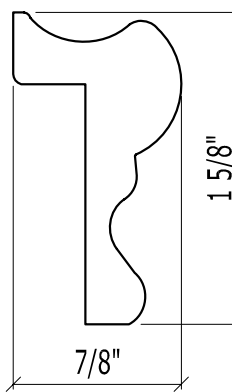


PM 241

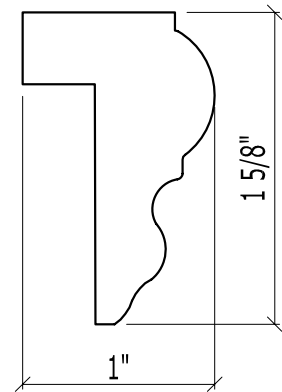


PM 242


PANEL MOULDINGS

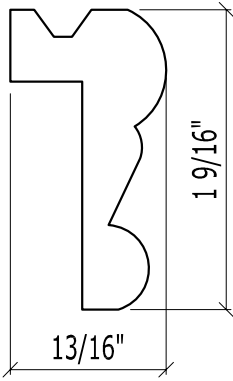


PM 243

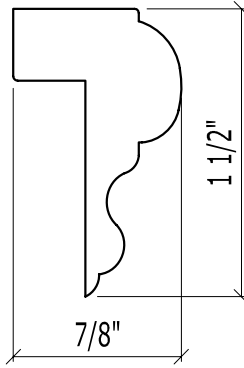


PM 244

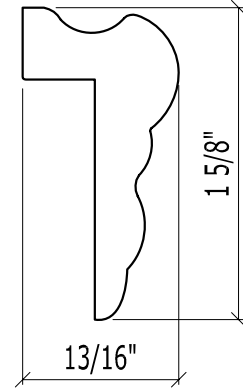


PM 245

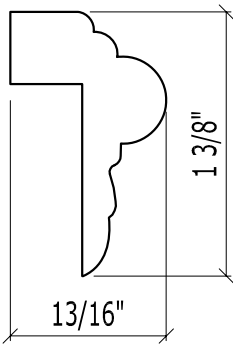


PM 246

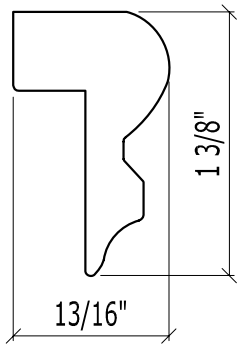


PM 247

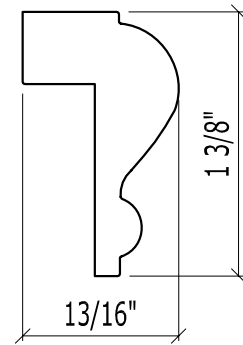


PM 248

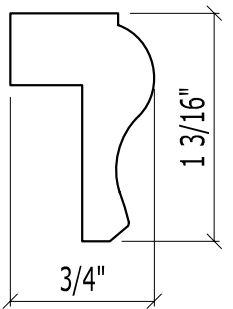


PM 249

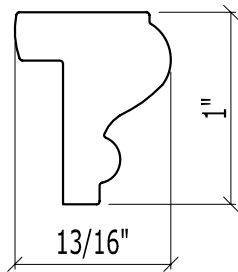

PM 250

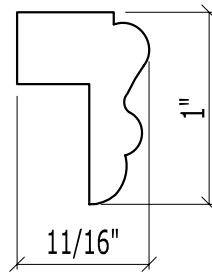

PM 251

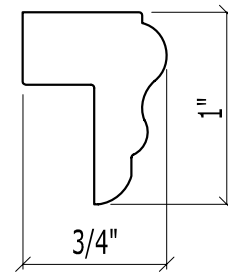

PM 252